




P.O. Box 1377 • Warren, MI 48090
 Phone: (586) 778-8828 • E-mail: spinpro@from-the.net
 Website: http://spinpro.from-the.net

7-Day Programmable Wildlife Feeder Mounting Instructions

⚠️ WARNING: WEAR SAFETY GLASSES TO PREVENT EYE INJURY.

1. Locate the center of barrel, bucket, or drum and determine which direction you want the controls and battery compartment to face.
2. Using the template at right, mark, then drill, four (4) holes as indicated using a $\frac{3}{16}$ " or $\frac{7}{32}$ " bit.
3. Drill or cut a $2\frac{1}{2}$ " to 3" hole in the center of the container.
4. Mount feeder to feed container using the four (4) #10-32 bolts and locknuts. Tighten the bolts and nuts securely. Do not fill feed container until instructed.

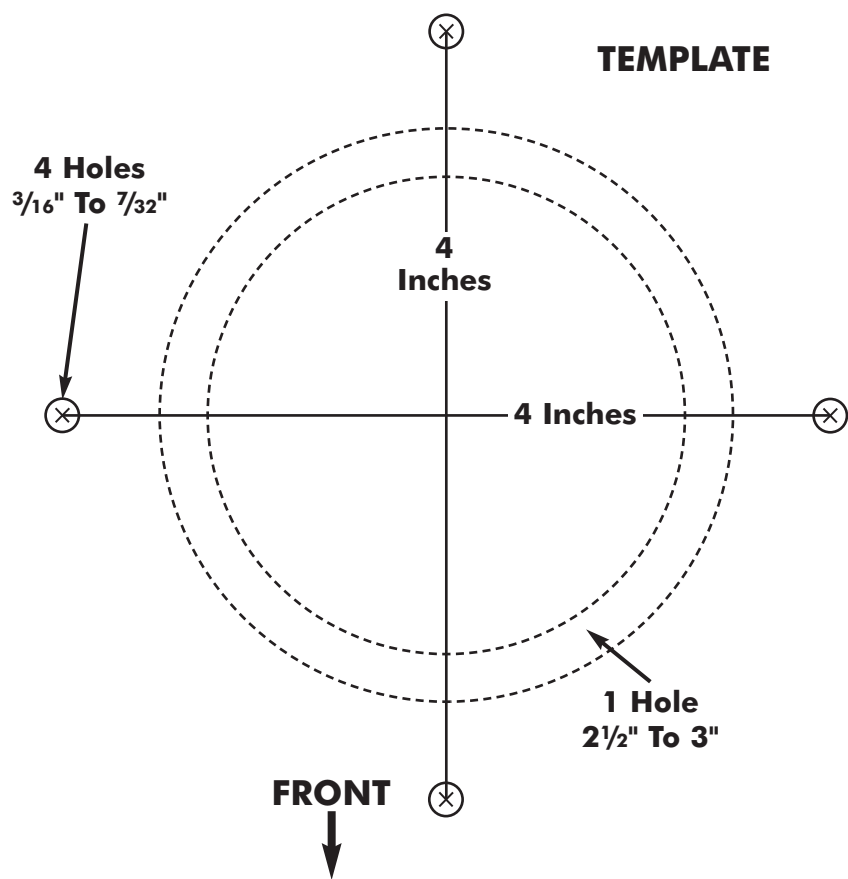


ADJUSTMENTS & OPERATION

⚠️ WARNING: The programmable timer in this feeder determines when the spinner plate will activate. When activated, the feeder "spins" feed off of the spinner plate at a high rate of speed, tossing it up to 20 feet away from the feeder. To prevent serious injury:

- Keep children at least 50 feet away from the feeder at all times.
- Wear safety glasses whenever you are within 50 feet of the feeder.
- Keep fingers and face away from the spinner plate at all times.
- Be extremely careful when manually testing the feeder.
- Never walk under a hanging feeder.

STARTING THE CLOCK TO SET THE PRESENT DAY & TIME

1. Remove the two thumbscrews that hold on the access cover. Read "Warning" on cover.
2. Remove (pull out) the plastic strip next to the feed control dial. This will apply power to the programmable time. The clock display will start blinking. See illustration.

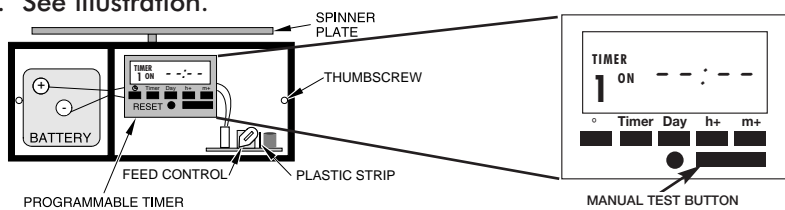

3. Press and **hold** the "Clock" (⌚) button, then press the "Day" button to select the present day.
4. Do the same thing with the "Hour" (h+) and "Minute" (m+) buttons to select the correct time. **Be sure** to select the correct AM or PM setting on the clock.

NOTE: The clock will operate up to two years with the "N" cell battery supplied. Replace this battery if the display gets weak or goes blank. This clock battery (Radio Shack #23-023) allows you to change the 6-volt feeder battery without losing the feed times you have selected.


INSTALLING THE 6-VOLT FEEDER BATTERY

1. Turn feed control dial fully counterclockwise (to the left); otherwise, the spinner plate may start to spin when the 6-volt battery is attached.
2. Place a fresh heavy-duty 6-volt lantern battery in the compartment on the left. **An Eveready Energizer is recommended for trouble-free operation.**
3. Connect the RED positive (+) alligator clip to the outside (+) battery terminal, and then connect the BLACK (-) negative alligator clip to the center (-) battery terminal.

Do Not Reverse Wires – Feeder may be damaged or not operate.

SETTING THE FEED TIME

1. Press and release the "Timer" button. The view screen should read:

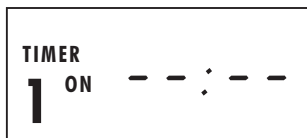


2. Press the "Day" button until the desired day, or combination of days, you wish to feed appear on the top line of the view screen. The following selections are available:

- Any Single Day - MO, TU, WE, TH, FR, SA, or SU
- 2 Days - SA and SU only
- 5 Days - MO, TU, WE, TH, and FR
- 6 Days - MO, TU, WE, TH, FR and SA
- Every Day - MO, TU, WE, TH, FR, SA and SU


3. Press the "Hour" (h+) button until the desired feed-time hour (AM or PM) appears, then press the "Minute" (m+) button until the desired feed-time minute appears. This sets the time that the feeder will turn "ON."

 Next, press and release the "Timer" button again. The view screen should read:




4. Repeat Steps 2 and 3 to set the "OFF" time of the feeder.

IMPORTANT: The "OFF" time must be set one minute greater than your "ON" time setting. For example, if "TIMER 1 ON" is set for 7:00 AM on Monday, then "TIMER 1 OFF" must be set for 7:01 AM on Monday.

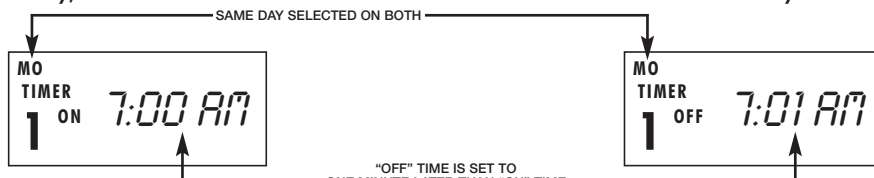

 5. Press and release the "Timer" button again. The view screen should read:



6. By repeating Steps 2 through 4, "TIMER ON/OFF" Cycles 2 through 6 can be programmed, if desired. **The feed times you program repeat week after week until you change them or the 6-volt battery goes dead.** Pressing the "Clock" (⌚) button at any time will return the view screen to the current day and time. Timer cycles can be changed at any time by pressing the "Timer" button until the desired cycle is displayed.

 
RESET BUTTON

Pressing the "Reset" button will clear **all memory** in the programmable timer, including the feed times and the current day and time.

SETTING THE FEED AMOUNT CAST BY THE SPINNER PLATE

1. Set the **Feed Control Dial** to the desired level. This control adjusts how long the spinner plate spins whenever the programmable timer activates the feeder. The feed control can be adjusted to operate the spinner plate from zero to about 15 seconds. Turning this control fully counterclockwise (to the left) will turn the feeder off. At a 15-second setting, about 5 pounds of feed will be scattered each time the feeder activates. The amount of feed cast at every programmed feed time will be the same.

2. The **Manual Test Button** can be used to test the spinner plate run time. **The view screen will show ON when in the manual mode.** Press this button again to return to the automatic mode. **The view screen will show OFF when in automatic mode.**



Automatic Cycling Will Not Occur While In The Manual Mode

NOTE: To avoid any problems, we strongly suggest that you experiment with the feeder before putting feed in the feed container. Input some practice times and fully understand the unit's operation before placing it into service.

2. Replace the access cover with the thumbscrews, making sure the battery clips are secure and lead wires are not pinched.
3. Fill feed container with the desired feed, then hang feeder in your selected location. Feeder will now activate automatically at your programmed feed times.